


## PRODUCT OVERVIEW

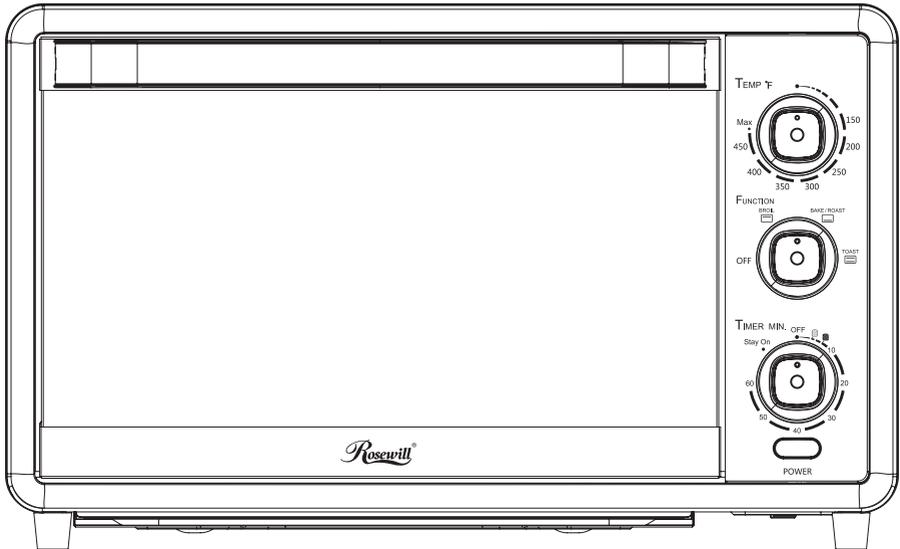

## BEFORE USING YOUR TOASTER OVEN

Before using your toaster oven for the first time, be sure to:

1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged and the Timer control is in the OFF position.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in the oven. Plug the oven into an outlet and you are ready to use your new toaster oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature (450 °F) on the toast function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

**Please Note:** Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

**CAUTION:** Always use extreme care when removing Bake Pan, Grill Rack or any hot container from a hot oven. Always use the rack handle, or an oven mitt when removing hot items from the oven.




## IMPORTANT SAFETY PRECAUTIONS

---

### THIS UNIT IS FOR HOUSEHOLD USE ONLY


1. Read all instructions before use and retain for future reference.
2. **Do not** touch hot surfaces.
3. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. **Do not** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If you need assistance, please contact Rosewill Customer Service: 1-800-575-9885 or techsupport@rosewill.com
7. **Do not** use outdoors.
8. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
9. **Do not** place on or near a hot gas or electric burner, or in a heated oven or in microwave oven.
10. **Do not** use appliance for reasons beyond its intended use.
11. **Do not** clean with material scouring pads. Pieces can break off the pad and cause electric shock.
12. The use of accessory attachments not recommended by the appliance manufacturer may be hazardous or cause injuries.
13. When operating the toaster oven, maintain at least four inches of space on all sides to allow for adequate air circulation.
14. To disconnect, turn the Timer control to OFF, then remove the plug. Always hold the plug; never pull the cord.
15. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
16. **Do not** cover Crumb Tray or any part of the oven with metal foil. This may cause overheating.
17. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
18. Oversized foods or metal utensils must not be inserted into toaster oven as they may create a fire or electric shock.
19. A fire may occur if the oven is covered or touching flammable materials, including curtains, draperies and walls during operation. Do not store any item on top of the oven during operation.
20. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
21. **Do not** place any of the following materials inside the toaster oven: cardboard, plastic, paper or other flammable materials.
22. **Do not** store any materials, other than manufacturer's recommended accessories, inside this oven when not in use.
23. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
24. This appliance has a tempered glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our toll-free Customer Service line before using the oven.

# PRODUCT DIAGRAM

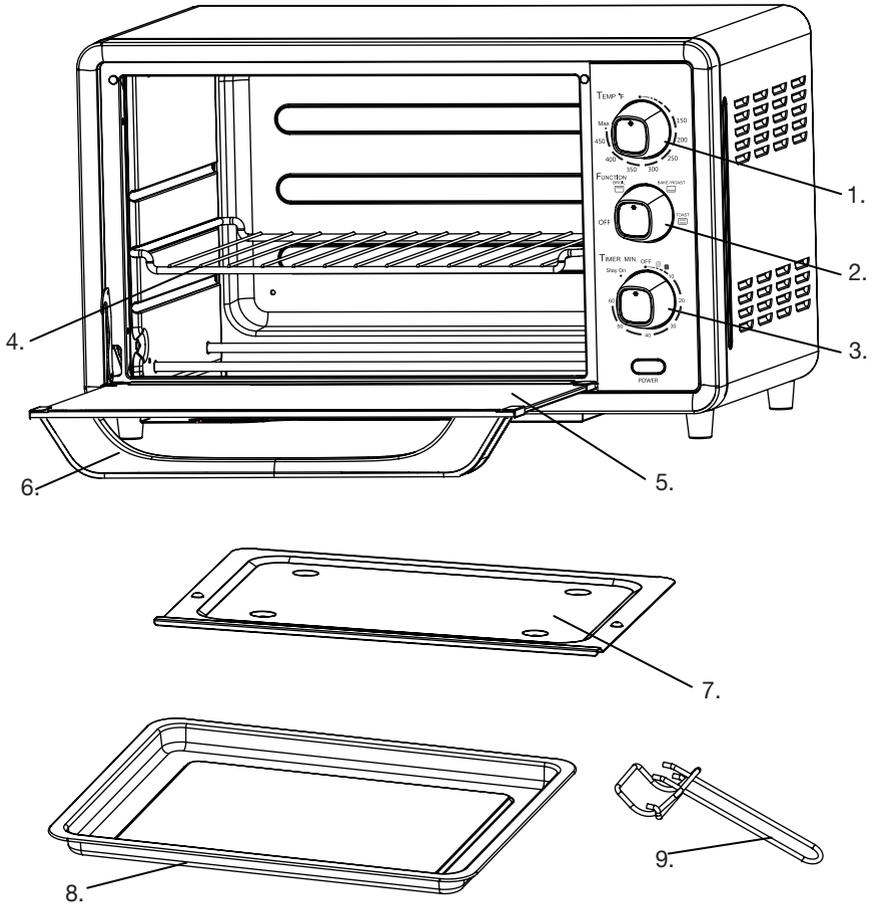

1. Temperature Dial
2. Function Dial
3. Timer Dial
4. Grill Rack
5. Glass Door
6. Handle
7. Crumb Tray
8. Bake Pan
9. Bake Pan Support

## CONTROL PANEL

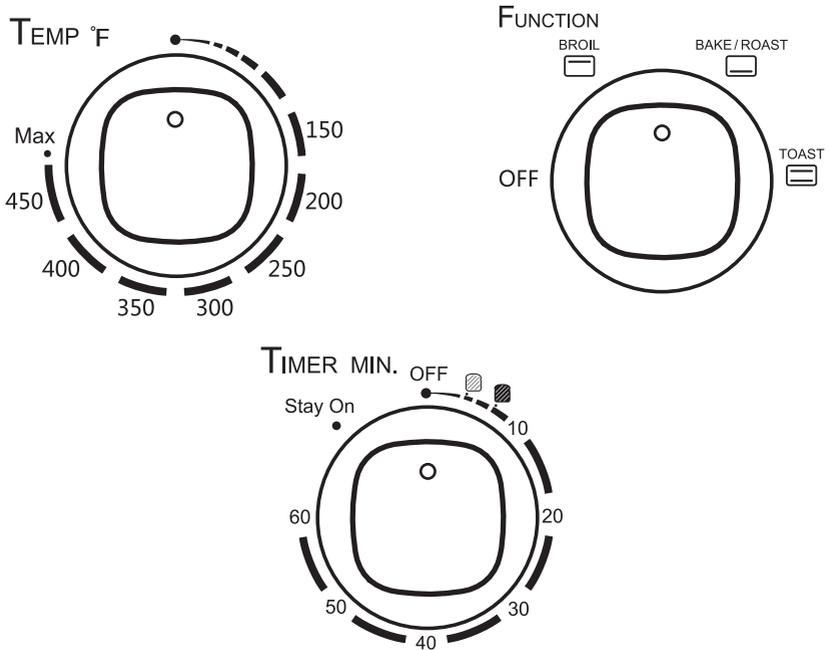

## CONTROL PANEL DESCRIPTION

Please familiarize yourself with the following oven functions and accessories prior to first use:

- **Temperature Dial:** Choose desired temperature from 150 °F to 450 °F for baking, broiling or toasting.
- **Function Dial:** There are 4 different heating modes:
  - OFF - Turn power off
  - BROIL - For broiling fish, steak, poultry, pork chops and more
  - BAKE/ROAST - For baking/roasting cakes, pies, cookies, poultry, beef, pork and more
  - TOAST - For toasting bread, muffins, frozen waffles, bagels, pizza, and more
- **Timer Dial:** Choose desired cooking time. There is a bell that rings at the end of the programmed time. To select the Stay On feature, turn the selector to the left (counterclockwise). The oven will stay ON until it is manually shut off.
- **Power ON Indicator Light:** Illuminated whenever the oven is turned on.

## Cooking Guide

Food Type	Function	Temperature	Time
Reheat Pizza	Toast	400 °F	15 Minutes
Toast bread with Cheddar Cheese	Toast	450 °F	15 Minutes
Bagel	Toast	450 °F	10 Minutes
Cake	Bake	350 °F	35 Minutes
Salmon Fillet	Boil	350 °F	45 Minutes

## Roasting Guide

For best results, cook all beef, lamb, veal or pork at 400 °F for 15 minutes, then reduce to 350 °F and use the remaining cooking times from the chart below:

Food Type	Time
Beef - Rare	15 Minutes
Beef - Medium	20 Minutes
Beef - Well Done	25 Minutes
Lamb - Medium	20 Minutes
Lamb - Well Done	25 Minutes
Veal - Well Done	30 Minutes
Pork - Well Done	35 Minutes
Chicken - Well Done	25-30 Minutes

## OPERATION AND FUNCTIONS

---

For best results, it is recommended that you preheat the oven for 5 minutes on MAX, trim excess fat from meat and dry any moisture that may be on the food.

**CAUTION: Never leave oven unattended while in use.**

### How to Broil

- Set the Temperature Dial to 450 °F
- Turn the Function Dial to Broil.
- Turn the Timer Dial to preheat the oven for 5 minutes.
- Place the food on the Grill Rack, Crumb Tray or the Bake Pan.
- Brush food with sauces or oil, as desired. Then slide the Crumb Tray and Grill Rack with food onto the Bake Pan.
- Food should be placed as close as possible to the top heating element without touching it.
- Select the temperature using the Temperature Control knob.
- Turn food over midway through the prescribed cooking time.
- When finished broiling, turn the timer to the OFF position to switch the oven off.

### How to Bake / Roast

- Place the removable Grill Rack into the desired position.
- Insert the Bake Pan and close the oven door.
- Turn the Timer Dial to the desired cooking time.
- Turn the Function Dial to Bake / Roast  .
- Select the temperature using the Temperature Dial.
- When finished baking, turn the timer to the OFF position to switch the oven off.

Bake your favorite cookies, cakes, pies, brownies and more. Compatible with bakeware up to 9 inches in length. We do not recommend the use of oven roasting bags or glass containers in the oven. **Never** use plastic, cardboard, paper or any similar materials in the oven.

**Note:** When using a single baking pan, position the Bake Pan in the lowest Bake Pan Support guide.

### How to Toast

For best results, it is recommended that you preheat the oven for 10 minutes at 350 °F.

- Place the Bake Pan in the lower support guides.
- Set the Temperature Dial to 350 °F.
- To preheat the toaster oven, turn the Function Dial to  .
- Turn the Timer Dial to the 10 minute position.
- When the toaster oven is preheated, the bell will ring and the toaster oven shuts OFF.
- Place bread to be toasted on the Grill Rack.
- Set the Temperature Dial to 450 °F.
- Turn knob to the dark shade toast icon  .
- When finished toasting, turn the timer to the OFF position to switch the oven off.
- You can also easily toast bread light or dark by turning the timer knob between the dark  and light  slice of bread icon.

**Note:** Toasting times will vary depending on the type of bread used.

## CARE AND CLEANING

---

**Warning: Be sure to unplug the oven and allow it to cool before cleaning.**

Your oven features a continuous clean coating that automatically cleans itself during normal operation. Any spattering that occurs while cooking and comes into contact with the continuous coating is oxidized while the oven is in operation. If desired, wipe the walls with a damp sponge, cloth or nylon scouring pad and mild detergent. **DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS OR SCRAPE THE WALLS WITH A METAL UTENSIL, AS ALL OF THESE METHODS MAY DAMAGE THE CONTINUOUS CLEAN COATING.**

All accessories should be washed in hot soapy water or can be cleaned in a dishwasher. The door can be wiped with a damp sponge and wiped dry with a paper or cloth towel. Clean the outside with a damp sponge. **DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.**

**DO NOT USE AN ABRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON THE DRIP PAN AS IT MAY DAMAGE THE PORCELAIN ENAMEL FINISH.**  
**LET ALL PARTS AND SURFACES DRY THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING.**

Due to continuous product improvement, specifications subject to change without prior notice.

### **WARNING**

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if only for a short time.
2. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
3. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not immerse this product in liquid.

## SPECIFICATIONS

---

Model	RHTO-19001
Storage / Size	26 L
Voltage	120 V
Watts	1400 W
Cord Length	31.5 in
Weight	11.9 lb
Material / Finish	Matte Black
Dimensions L x W x H	18.58 x 13.77 x 11.33 in



### Technical Support Information

*techsupport@rosewill.com 1-800-575-9885  
Please register your product at [www.rosewill.com](http://www.rosewill.com)  
for complete warranty information and support for  
your product.*

